Entrance Tree Assembly - Regular or LED Lights

For Indoor or Outdoor Display Retain carton for storage purposes

ASSEMBLY:

Place the tree base on a sturdy surface and insert the center pole of the tree into the center opening of the base. Push the tree in until it is firmly seated.

Taller trees will have an additional tree section. Insert the center pole of the lower tree section into the center opening of the base and push down until firmly seated; tighten thumb screw if equipped. Insert upper section center pole into lower section center pole and push down until firmly seated.

The light string cords from separate tree sections have to be connected. Plug the light string cord from the top section into the end (female) connector of the bottom section (Fig. 1).

SHAPING:


The tree is shipped from the factory with the tips of each branch compressed to the center. Working your way up from the bottom, gently lower each branch from its upright setting by grasping the branch and pulling it downward (Fig. 2).


Each branch must the be shaped to a natural position by spreading out the left and right tips away from the center tip. Continue to lower and shape branches in the same manner as you work your way up the tree.

STORAGE:

Branch tips should be carefully pressed back toward center when tree is disassembled for storage. Store in the original carton in a cool, dry location, protected from sunlight.



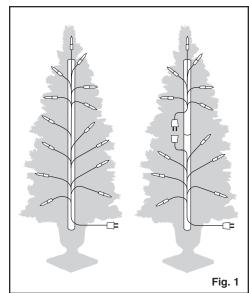


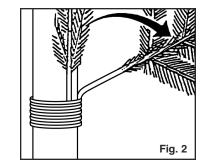



BULB REPLACEMENT INSTRUCTIONS

   - 1. Unplug light string from power source.
- Pull up on the Bulb Lock (if equipped) unlatching the bulb from the bulb socket. Gently pull the bulb straight out (Figure 1).
- 3. Before inserting the new bulb into socket, make sure that the two wires on either side of the the bulb base are straight up and flush with the base (diagram at right).











FUSE REPLACEMENT INSTRUCTIONS

  
- 1. Unplug light string from power source.
- Fuses are located in light string plug. Slide the fuse access cover away from cord side (in direction of arrow, Figure 1) exposing fuses.
- Remove fuses from compartment and examine. Replace burnt out fuse with new one.
- 4. Close fuse compartment by sliding access cover back in towards cord side of plug (Figure 2).





Entrance Tree Assembly - Low Voltage LEDs



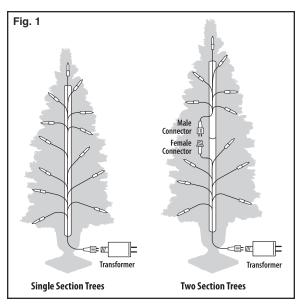


ASSEMBLY:

Place the tree base on a sturdy surface and insert the center pole of the tree into the center opening of the base. Push the tree in until it is firmly seated.

Taller trees will have an additional tree section. Insert the center pole of the lower tree section into the center opening of the base and push down until firmly seated; tighten thumb screw if equipped. Insert upper section center pole into lower section center pole and push down until firmly seated.

The light string cords from separate tree sections have to be connected. Connect the male connector of the

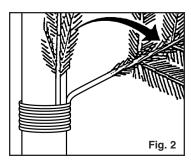

light string cord from the top section into the female connector on the light string of the bottom section (Figure 1). Single section trees will have only one light string cord.

SHAPING:

The tree is shipped from the factory with the tips of each branch compressed to the center. Working your way up from the bottom, gently lower each branch from its upright setting by grasping the branch and pulling it downward (Figure 2).

 
Each branch must the be shaped to a natural position by spreading out the left and right tips away from the center tip. Continue tzo lower and shape branches in the same manner as you work your way up the tree.

STORAGE:

Branch tips should be carefully pressed back toward center when tree is disassembled for storage. Store in the original carton in a cool, dry location, protected from sunlight.

BULB REPLACEMENT INSTRUCTIONS

- Unplug light string from power source.
- 2. Pull up on the Bulb Lock unlatching the bulb from the bulb socket. Gently pull the bulb straight out.
- 3. Carefully insert new bulb into socket (bulb is keyed and only goes in one way) and push down Bulb Lock until it snaps into place.



For Indoor or Outdoor Display • Retain carton for storage purposes