

Revolving Tree Stand MODEL RS32-3

■ Rotates tree 360°.

■ For trees up to 7½ ft. (2.25 m) tall with maximum center pole diameter of 1¼ in. (3 cm).

■ Tree weight not to exceed 80 lbs. (36.3 kgs) including decorations.

■ Maximum allowable lights not to exceed 1000 mini-lights.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be observed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or any wire.
- Unplug the product when leaving the house,

- when retiring for the night, or if left unattended.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- Never operate this product if the power cord or plug is damaged.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electrical shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- This product employs overload protection

(fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the power outlet. Also unplug any additional strings or products that may be attached to this product. Replace the fuse per FUSE REPLACEMENT INSTRUCTIONS (follow product marking for proper replacement fuse rating) and check product for proper function. If the replacement fuse blows, a short circuit may be present and the product should be discarded.

- This seasonal use product is not intended for permanent installation or use.
- Use only with an artificial tree. This stand does not contain a well for water.

USE AND CARE INSTRUCTIONS

 
 
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.

Assembly (Figure 1)

Tree stand is packaged with the legs separate from the center base. Slide the four legs up into the center base making sure that each is fully inserted and securely attached.


The stand will accept artificial tree center poles with either 1" (2.54 cm) or 1.25" (3 cm) diameters. For 1" diameter center pole, use the included adaptor. Remove adaptor for use with 1.25" diameter pole.

Plug male end of the light string cord from the tree into the female receptacle of revolving stand light string cord. Plug the stand power cord into a power supply.

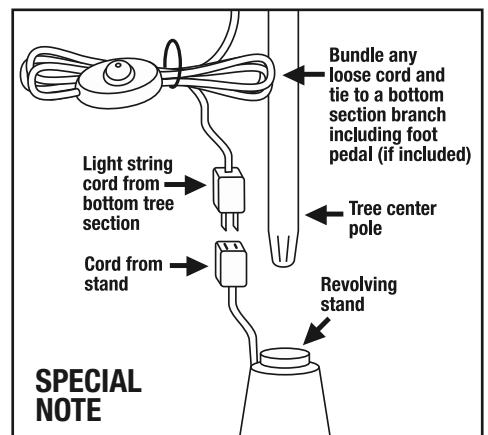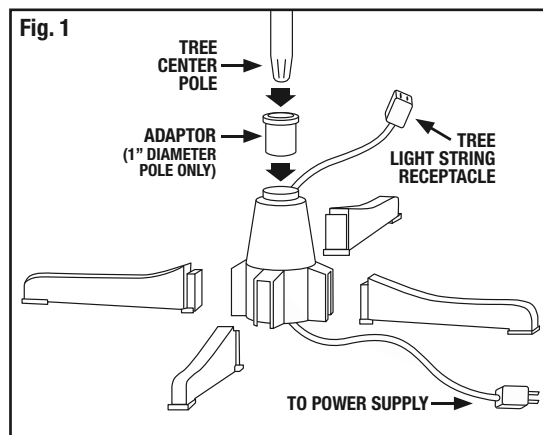

Operation (Figure 2)

 A three-way switch operates the stand: the bottom position will power the lights and rotate the tree; the top position will power the lights but will not rotate the tree; the center position is all power OFF.

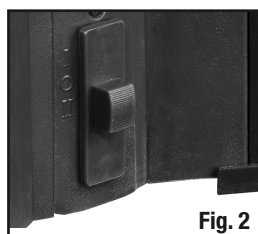

Fuse Replacement

RISK OF FIRE. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

1. Unplug tree stand from power source.
2. Fuses are located in the plug. Slide the fuse access cover away from cord side (in direction of arrow, Figure 3) exposing fuses. Spare fuse is also inside compartment.
3. Remove fuse from compartment and examine. Replace burnt out fuse with new one (5A, 120V only).
4. Close fuse compartment by sliding access cover back in towards cord side of plug (Figure 4).

